

# Installation Guide

## CLEAR ROLLER BLINDS



**DO NOT** UNDO THE LOCKING BOLT UNTIL THE BLIND IS FITTED TO AVOID DAMAGE OR INJURY



1



Offer the roller blind up to it's ideal position and **mark the bracket location** on the framework. Using the **template provided**, mark the holes for the brackets.



Screw in the **dowels supplied**, leaving approximately **half inch protruding** from the framework. Offer up the blind to the dowels to check placement.



3



Using a **spirit level** ensure that the blind is **perfectly level**, before **attaching the second bracket** at the opposite end.



Screw in the **dowels supplied**, leaving approximately **half inch protruding** from the framework. Offer up the blind to the dowels to check placement.



5



Fit the blind to the dowels and **use the nuts provided** to tighten and secure.



Now that the blind is securely in place, **remove the protective packaging** and film.



7



**Remove the locking off bolt** from the end of the blind allowing the spring mechanism to work.



Pull down the clear blind to the required depth and **mark location of the securing eye**. Using the **template provided**, mark the corner where the securing eye should be located.



Screw in the **dowels supplied**, leaving approximately **half inch protruding** so you can attach the securing eye. Ensure the securing eye is fixed in a **horizontal position**.




Secure the blind in place by pushing the bar onto the securing eye. **Insert the peg** to hold in place.



**Repeat the process** of marking the location of the second securing eye to the **opposite end**.

## Follow The Steps In Our Video...

SCAN THE CODE TO VIEW OUR  
YOUTUBE TUTORIAL

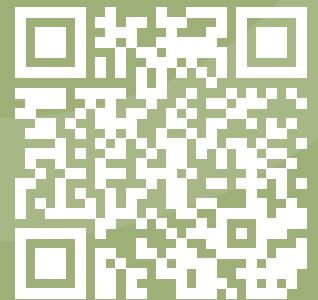

**Don't Forget To Leave A Review!**

Follow us on social media: [facebook.com/coverttecblinds](https://facebook.com/coverttecblinds)